


Freedman Seating Company's seat belts have a switchable feature, the benefit of being able to cinch down a Child's car seat properly. Switchable retractors are ALR- auto locking, and ELR emergency locking. The auto-locking feature is achieved by pulling the seat belt out to activate the ARL feature. (You'll hear a ratcheting noise when releasing the belt – The belt only gets tighter) See safety instructions on the belt label.

To release unbuckle it and feed a few inches of the belt back into the retractor, and the belt will again be free-wheeling, (No ratcheting) ALR/ELR feature is commonly found for passenger seats in most cars. ALR/ELR Video- <https://www.freedmanseating.com/video/automatic-emergency-locking-retractors/>

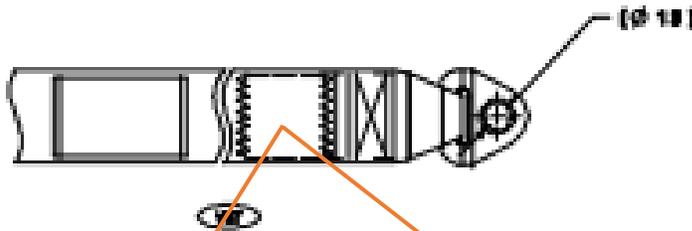

ELR -Emergency locking activates by the angle of the seat or vehicle; the benefit is it safely secures you in the vehicle seat in the event of a vehicle rollover.

FREEDMAN

SEATING COMPANY

15361

NOT TO BE USED, DISCLOSED OR REPRODUCED WITHOUT PERMISSION.
PROPERTY OF THE FREEDMAN SEATING COMPANY.

NOTE(S): 1) PLACE ONE OF THESE IN EACH VEHICLE IN THE RESTRAINT SYSTEM SECTION OF THE OWNERS MANUAL TO CONFORM WITH FMVSS 571.208

CHILD SEAT INSTALLATION INSTRUCTIONS.

- 1) ROUTE THE SEAT BELT THROUGH CHILD SEAT AS INSTRUCTED IN MANUAL PROVIDED BY CHILD SEAT MANUFACTURER. INSERT TAB INTO BUCKLE.
- 2) TO ENGAGE THE LOCKABLE RETRACTOR, PULL SHOULDER BELT ALL THE WAY UNTIL IT STOPS. ALLOW BELT TO FEED BACK INTO RETRACTOR. A CLICKING NOISE WILL BE EMITTED FROM THE RETRACTOR.
- 3) CHECK TO SEE IF THE BELT HAS LOCKED. TUG ON THE BELT, IF IT PULLS FREELY THE LOCKABLE RETRACTOR IS NOT ENGAGED, REPEAT STEP 2
- 4) GRAB THE SHOULDER BELT NEAR THE BUCKLE AND PULL UP TO REMOVE ANY SLACK FROM THE LAP BELT.
- 5) PUSH AND PULL THE CHILD SEAT TO VERIFY IT IS SECURE. IF SEAT IS NOT SECURE, UNLATCH BELT AND REPEAT ABOVE STEPS.

FOLLOW THE ABOVE STEPS FOR REAR FACING CHILD SEATS.

				Tolerance Unless Otherwise Specified		Material:		Freedman Seating Co.		4545 W. Augusta Chicago, IL 60651			
						Specifications:		Part Name: INSTRUCTIONS, SWITCHABLE ELR					
						Drawn by: MW		Date: 07/15/04		DO NOT SCALE DRAWING			
								Drawing No. 15361		Rev. B			
Rev. Level	Description of Change			By	Date	ECN #	Rev. Level	Description of Change			By	Date	ECN #
	B REVISED PART NAME			RW	12/04	4108							
	A RELEASE TO PRODUCTION			MW	7/04	3877							