

AbiliTrax Seat Pods

BY **FENTON**



*Shown here enlayed into flooring

Made in the USA, an **AbiliTrax Seat Pod** resizes the standard AbiliTrax full floor modular track system into a stand alone single seat option offering FMVSS compliant individual aftermarket seating solutions for the Ford Transit, RAM ProMaster and Mercedes Sprinter Vans.













SECTION B
MGA TEST #Q18030 - C/FMVSS 207/210 FORWARD





The AbiliTrax Seat Pod has passed rigorous pull testing performed on multiple locations throughout the OEM chassis floor, pulled from both the seat base as well as lap and shoulder belt points, at a combined force of 7,000 lbs. to ensure full FMVSS compliance.







With easy to follow instructions and online technical support available, both commercial and retail customers now have the ability to independently design, purchase and install safe rear seating into their work and recreational full size vans.









AbiliTrax Seat Pods are Available in 3 finishes







Available in Zinc Chromate,
Black E-Coat or upgraded
Stainless Steel finishes, the
AbiliTrax Seat Pods are
constructed with the same
A1011 HSLA 50 high strength
steel and Grade 8 zinc coated
hardware for installation
providing the same maximum
strength and corrosion
resistance as our full floor
systems





AbiliTrax Seat Pods are compatible with 3 Seat Bases:












AbiliTrax Seat Pods are sold in a 3 Piece Installation Kit which includes:

- AbiliTrax Seat Pod √
 (in zinc, black or stainless)
- AbiliTrax Seat Base √ (Step-N-Lock or CAMLock2)
- Compatible Freedman Seat Top $\sqrt{}$ (based on chosen seat base)





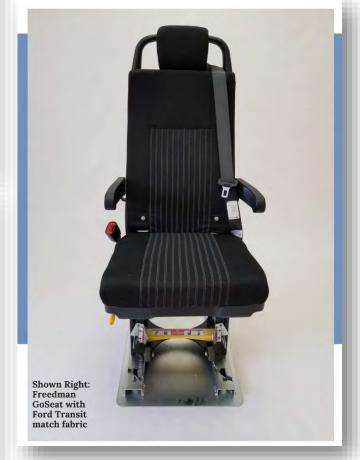



Selling Features:

- Hand Free Foot Activated Easy Disconnection
- Flips for additional space and stowing
- Two seats flipped up can stow in one pod

Compatible With:

- Freedman 3PT
- Freedman GoES
- Freedman GoSeat







Selling Features:

- Most Cost Effective
- Offers additional upgraded seating options (Eleganza)
- Offers single and double seating
- Tool free latching mechanisms for ability to easily remove when needed.

Compatible With:

- Freedman 3PT
- Freedman GoES
- Freedman GoSeat
- Freedman Eleganza





Double FoldAway Options featuring the Bellagio coming soon!

