


# AATC0000

## FORD TRANSIT 10 RAIL CREW FLOOR

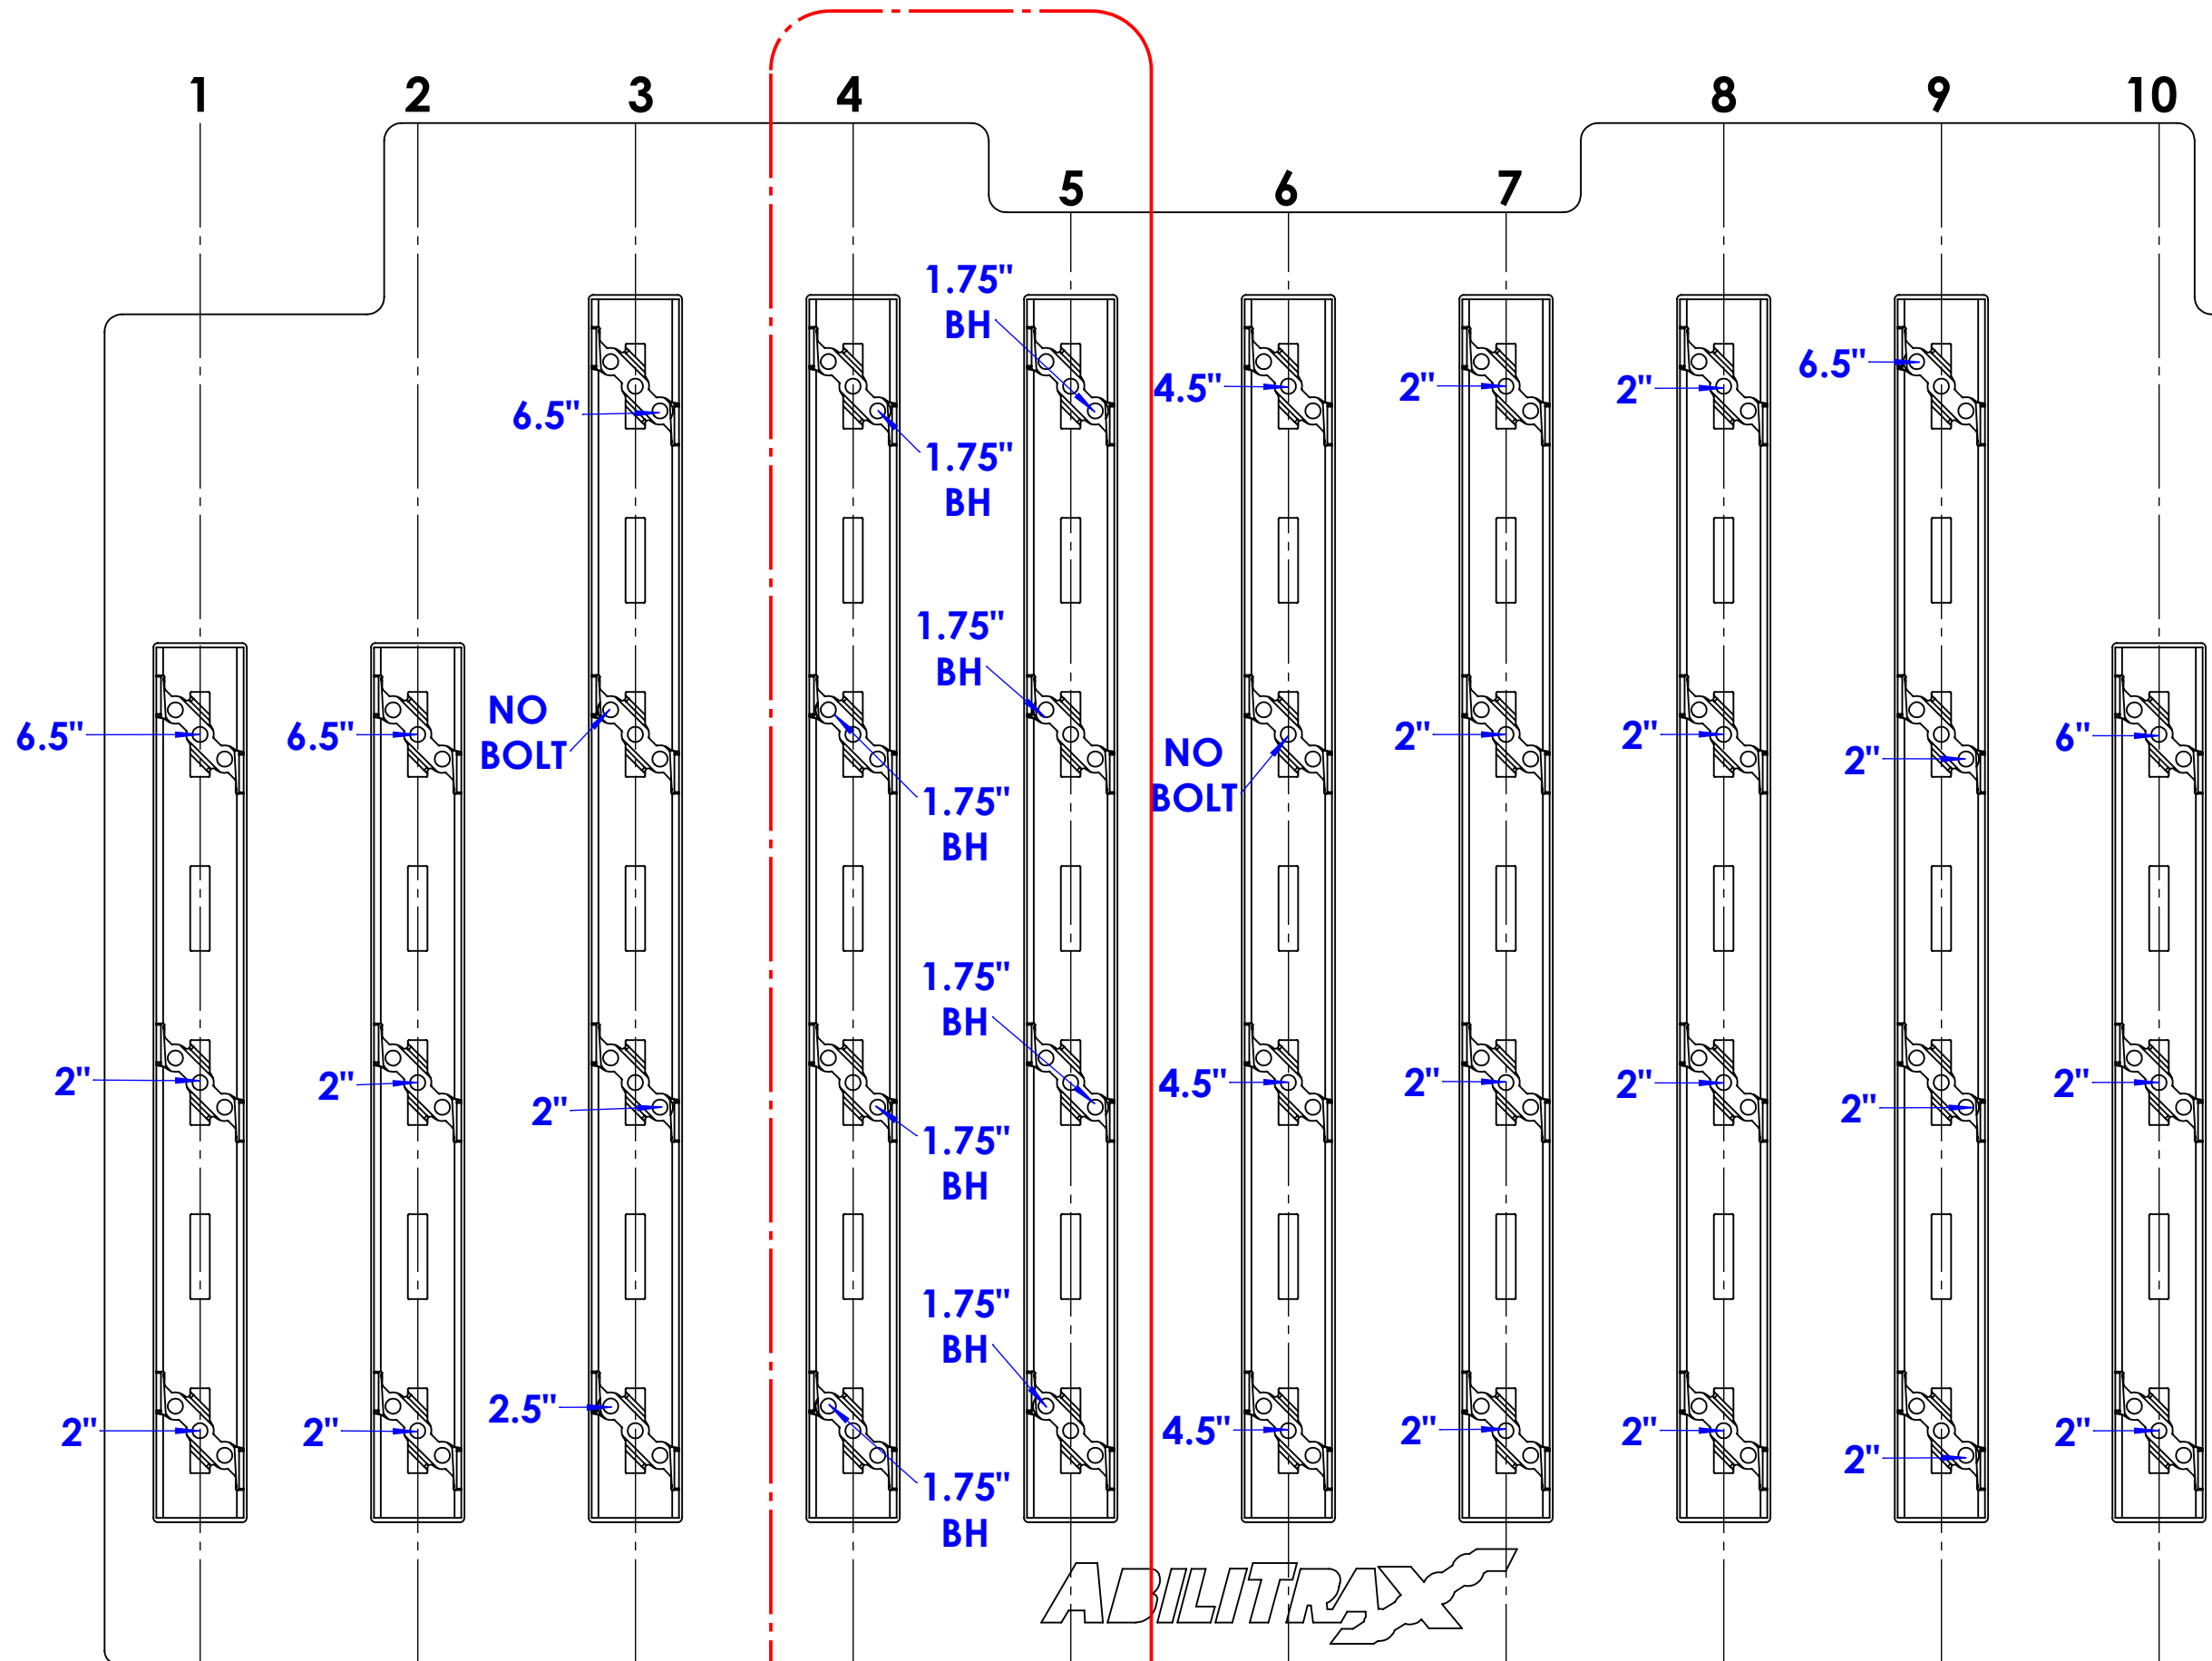

- 8X - 1.75" BUTTON HEAD
- 18X- 2" HEX HEAD
- 1X- 2.5" HEX HEAD
- 3X- 4.5" HEX HEAD
- 1X- 6" HEX HEAD
- 4X- 6.5" HEX HEAD
  
- ALL BOLTS ARE 3/8-16 THREAD GRADE 8
- ALL NUTS ARE 3/8-16 THREAD THROUGH HARDENED
- SELF LOCKING FLANGE NUTS TORQUED TO 30 FT./LBS. MAX.
- ALL WASHERS (EXCEPT "STANDARD DIA") ARE 2" O.D. X 1/8" THICK THUR HARDENED
- ALL STANDARD 3/8" FLAT WASHER ARE GRADE 8

**FUEL TANK**

**CAUTION - FUEL TANK BELOW - ALL BOLTS IN THIS AREA MUST BE BUTTON HEADED AND INSTALLED UP THROUGH FROM BOTTOM SIDE (THREADED END POINTING UP, AWAY FROM FUEL TANK). ALSO USE QTY. 2 OF 2" OD WASHERS UNDER HEAD OF EACH BUTTON HEAD BOLT IN THIS AREA**