


BOLT CHART - RAM PROMASTER CREW FLOOR

D C B A

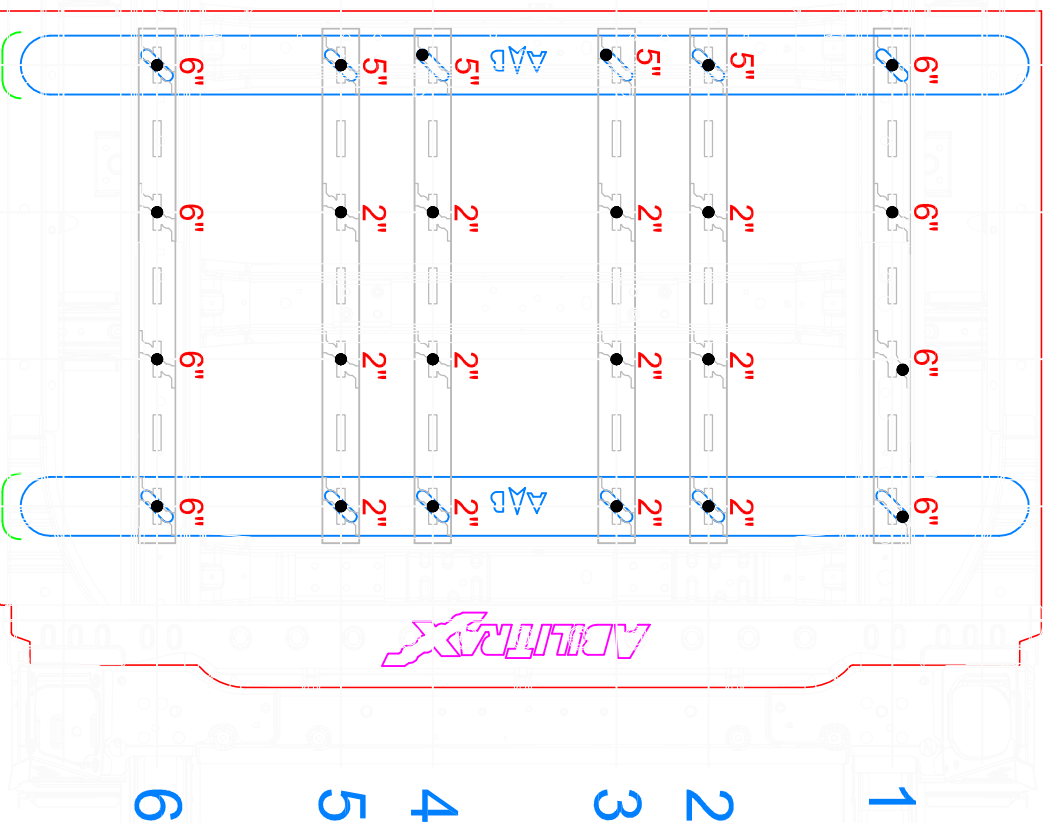

D C B A

ALL BOLTS ARE 3/8-16 THREAD
GRADE 8 HEX HEAD

ALL NUTS ARE 3/8-16 THREAD THROUGH
HARDENED
SELF LOCKING FLANGE NUTS
TORQUED TO 30 FT./LBS. MAX.

ALL WASHERS
(EXCEPT "STANDARD DIA") ARE
2" O.D. X 1/8" THICK THRU
HARDENED

ALL STANDARD 3/8" FLAT WASHERS
ARE GRADE 8

BOLT LENGTHS	
2" QTY.	12
5" QTY.	4
6" QTY.	8
TOTAL QTY. 24	